



Birlea

Suppliers of inspiration

Vendor: S000238



ASSEMBLY INSTRUCTIONS

3'0 CORONA LOW END BED

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR 3'0 CORONA LOW END BED.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Always use on a level, even surface.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.





CARE & MAINTENANCE:


Periodically check all screws & fixings to ensure they are secure.

DO NOT push the bed frame as this will damage the legs.

Always lift the bed with two people to reposition.

Keep any sharp objects away from the frame.

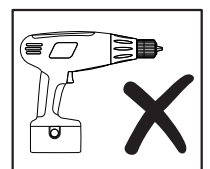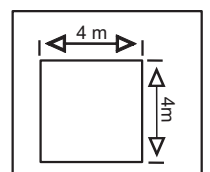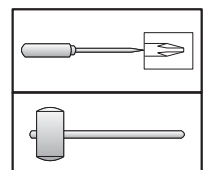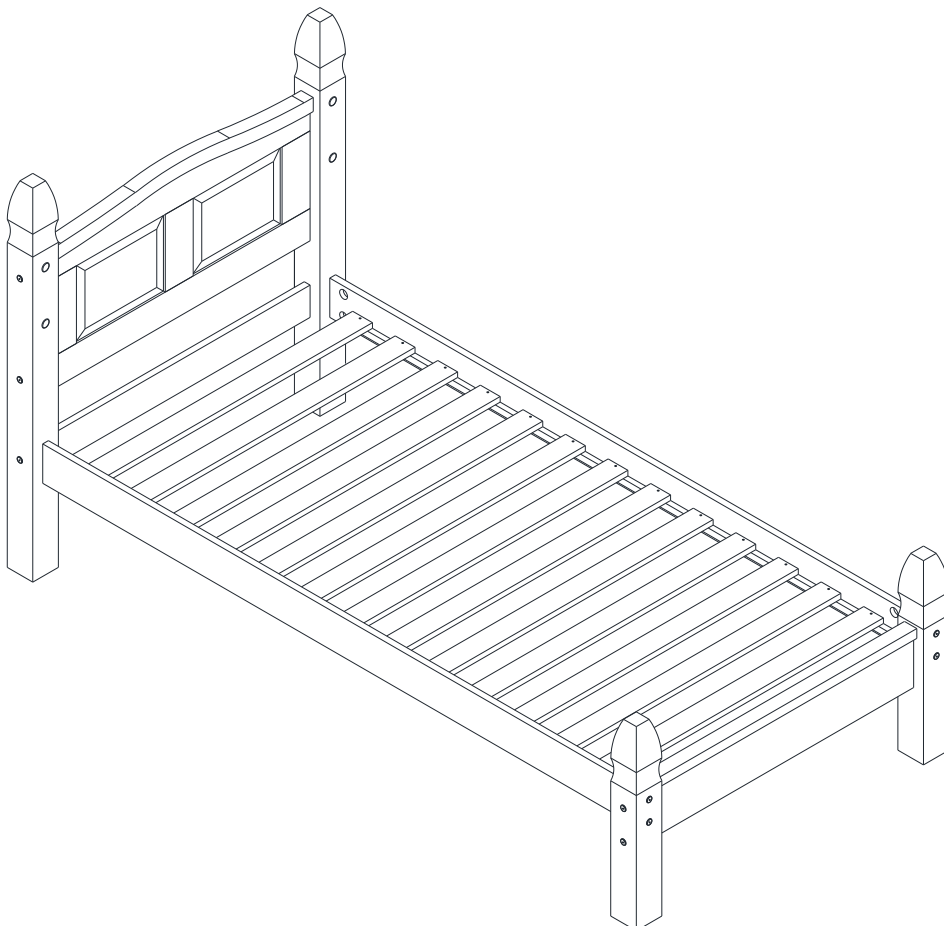

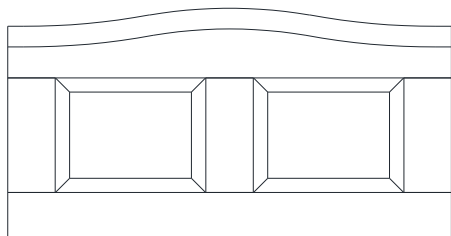


1 Headboard panel (86 x 49cm) - Box 1



2 Headboard rail (86 x 9.2cm) - Box 1



3 Footboard panel (86 x 17.3cm) - Box 1



8 Side rail x 2 (190 x 11.2cm) - Box 2



9 Slat x 13 (92 x 6.5cm) - Box 1



4 Left headboard post (110 x 8.2cm) - Box 2



5 Right headboard post (110 x 8.2cm) - Box 2



6 Left footboard post (56 x 8.2cm) - Box 2








7 Right footboard post (56 x 8.2cm) - Box 2



10 Hardware Kit x 1 - Box 2


HARDWARE LIST - Box 2

Part	Item	Qty	Part	Item	Qty
A	30mm dowel 	8	F	Half moon nut 	8
B	40mm dowel 	4	G	Round metal stud 	4
C	30mm Screw 	26	H	Allen key 	1
D	120mm Bolt 	10	J	Spacer 	2
E	130mm Bolt 	8	You will need a screwdriver, small mallet and M11 spanner (not provided).		

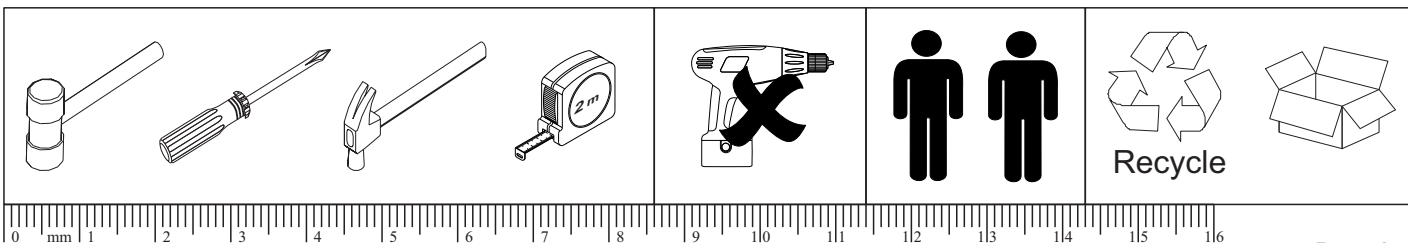


Step 1: Insert hardware part B to the side rails (8) using a small mallet (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Vendor: S000238

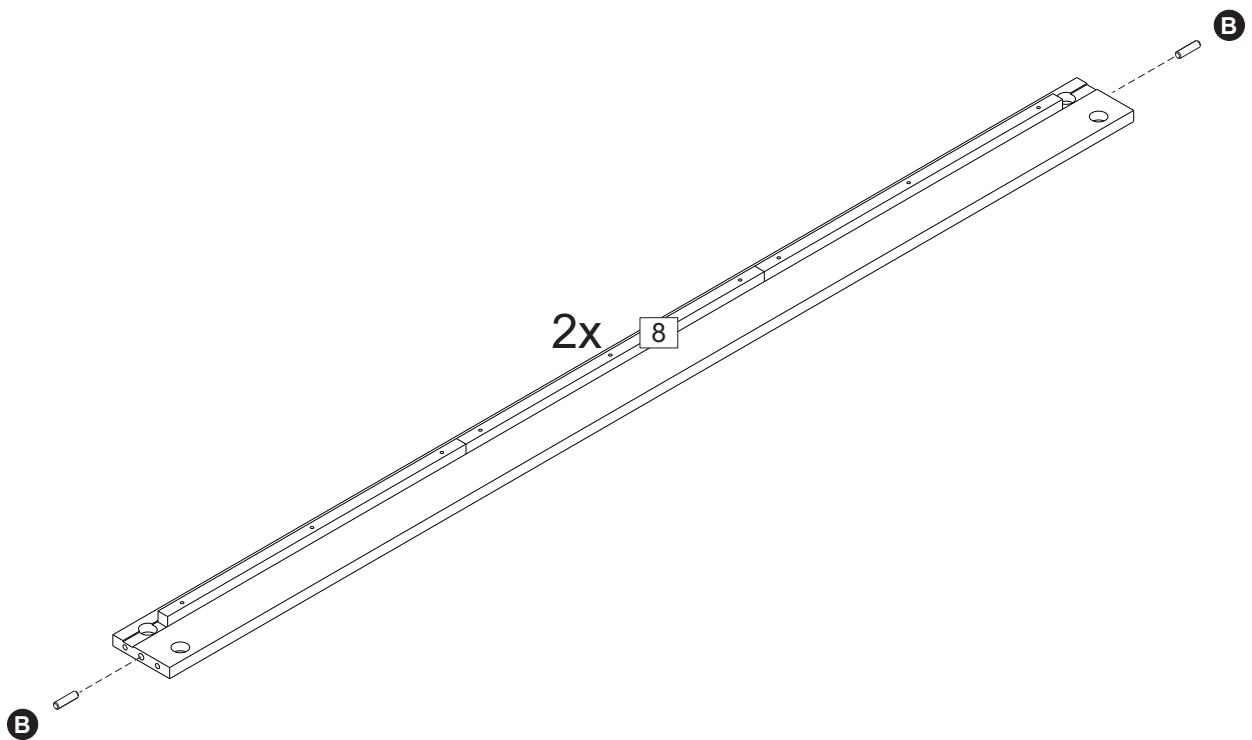


Step 2: Insert hardware part A to the headend panel (1), footboard panel (3) and Headboard rail (2) using a small mallet (not provided).

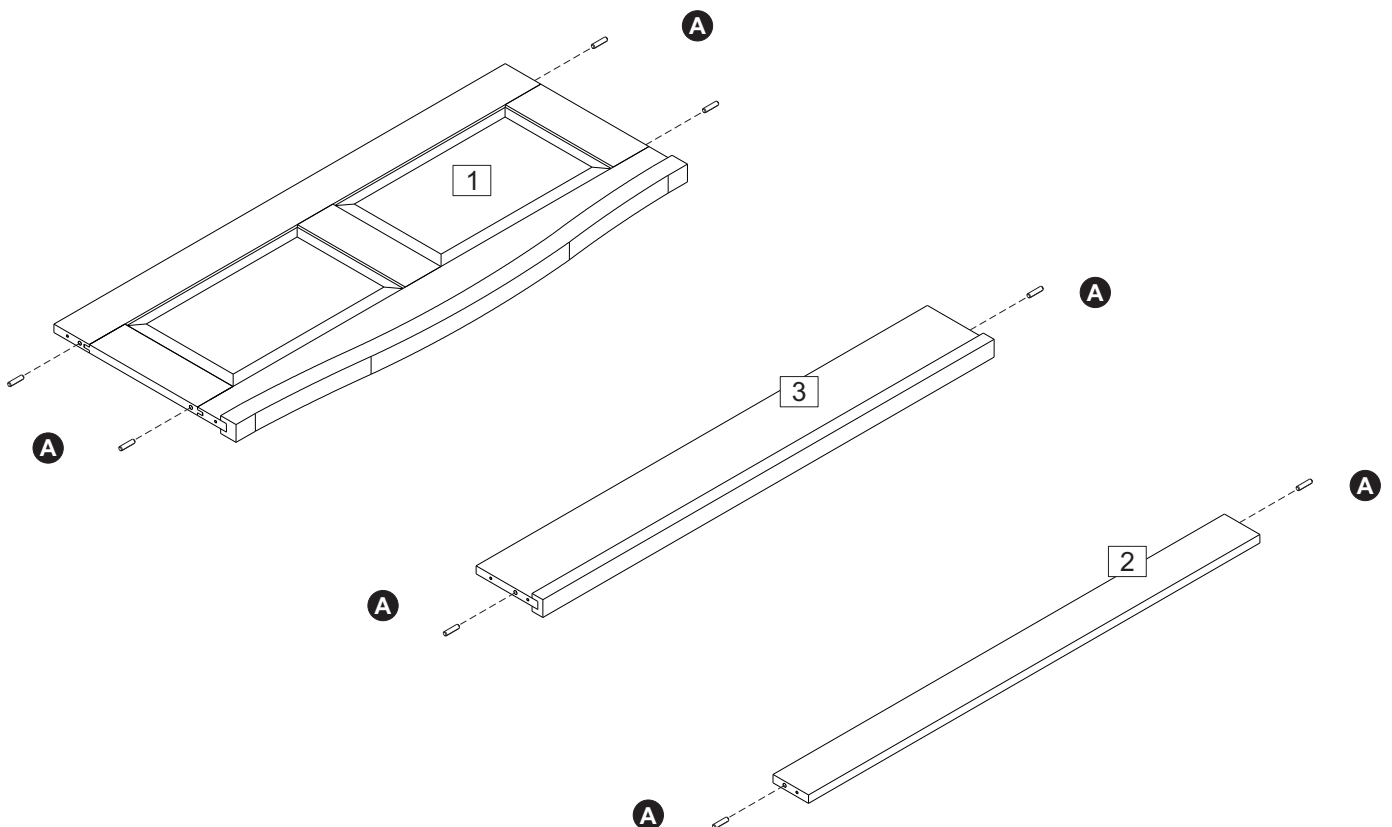


Step 3: Attach the left headboard post (4) and right headboard post (5) to the headend panel (1) and headend rail (2) using hardware parts N and H.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Vendor: S000238

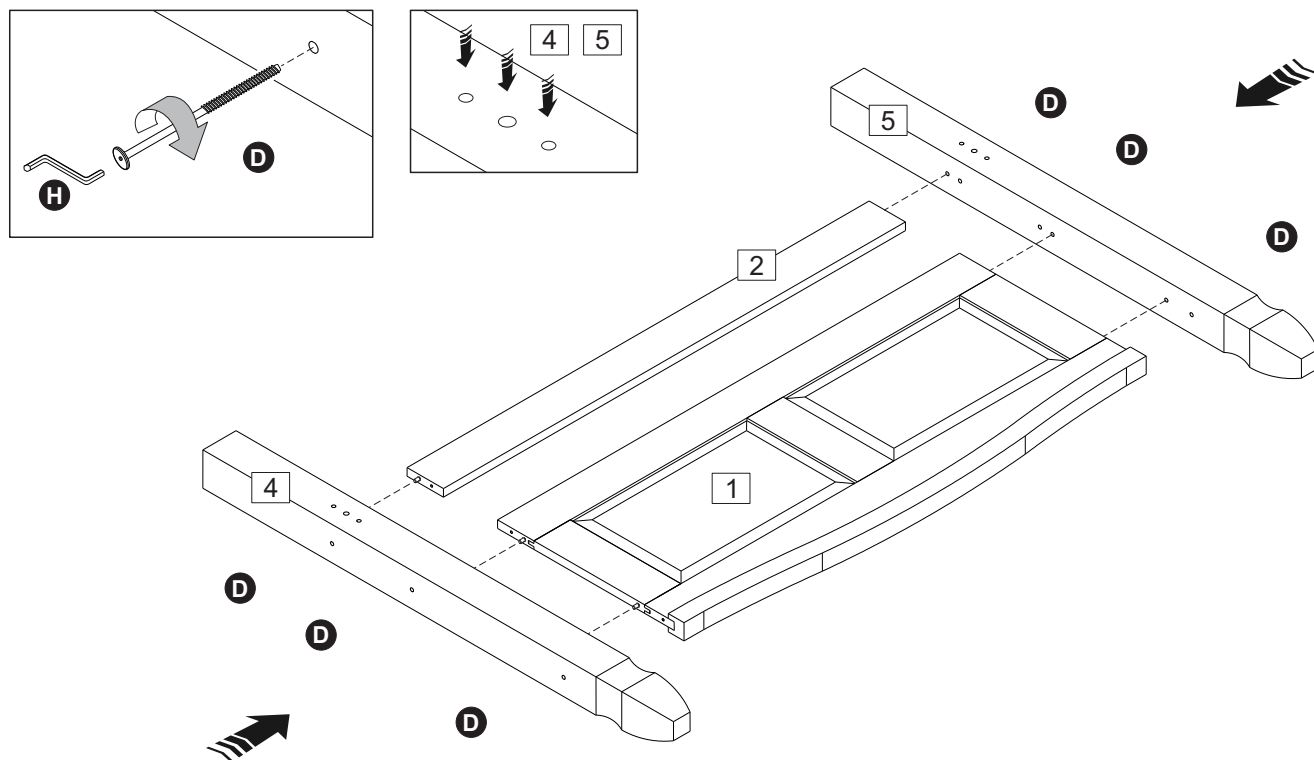


Step 4: Attach the left footend post (6) and right footend post (7) to the footend panel (3) using hardware parts H and D.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

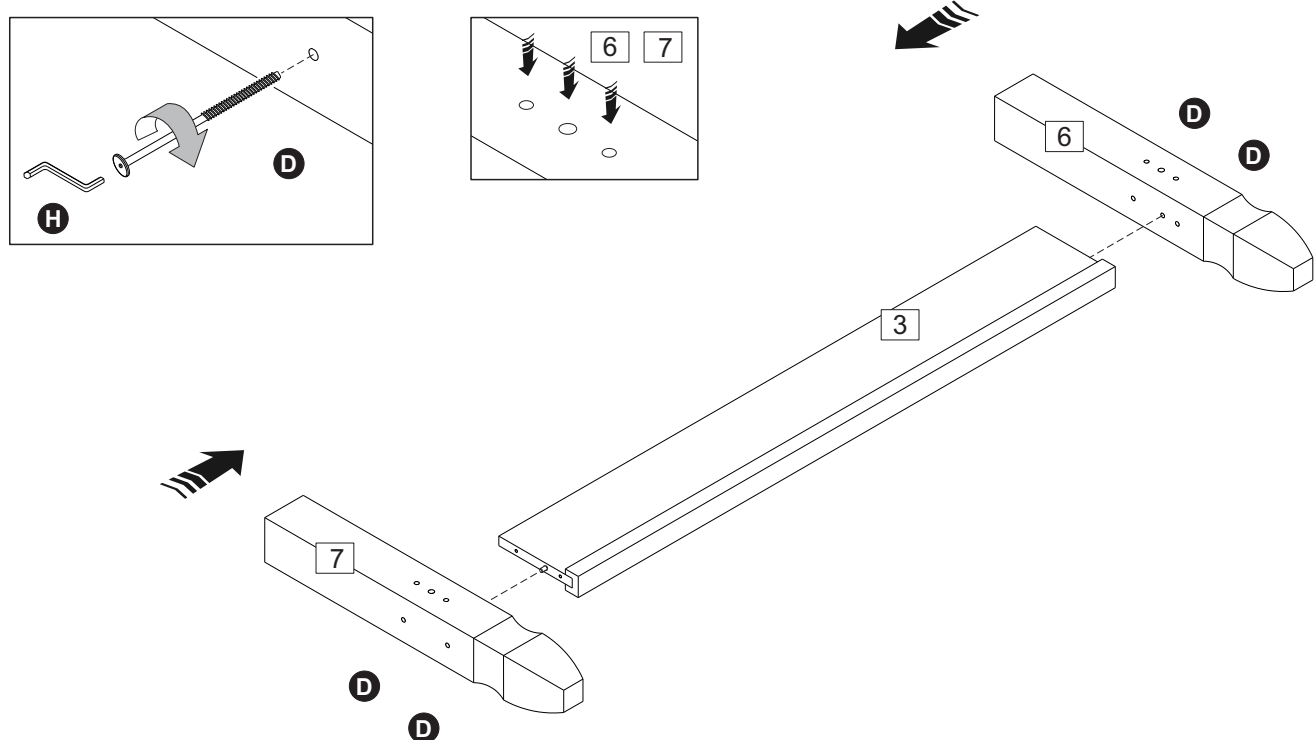


Step 5: Attach the side rails (8) to the headboard posts using hardware parts H, E and F.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Vendor: S000238

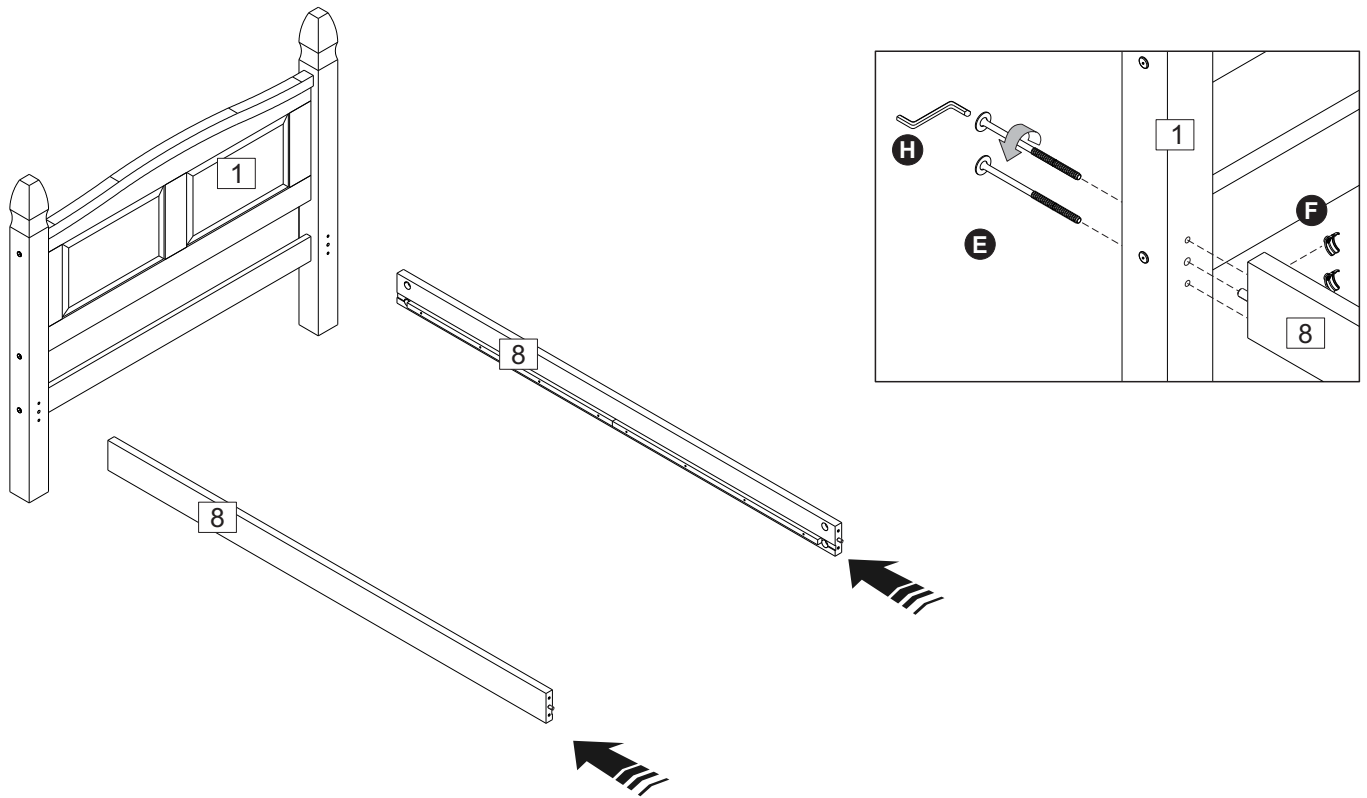


Step 6: Attach the footend using hardware parts H, E and F.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

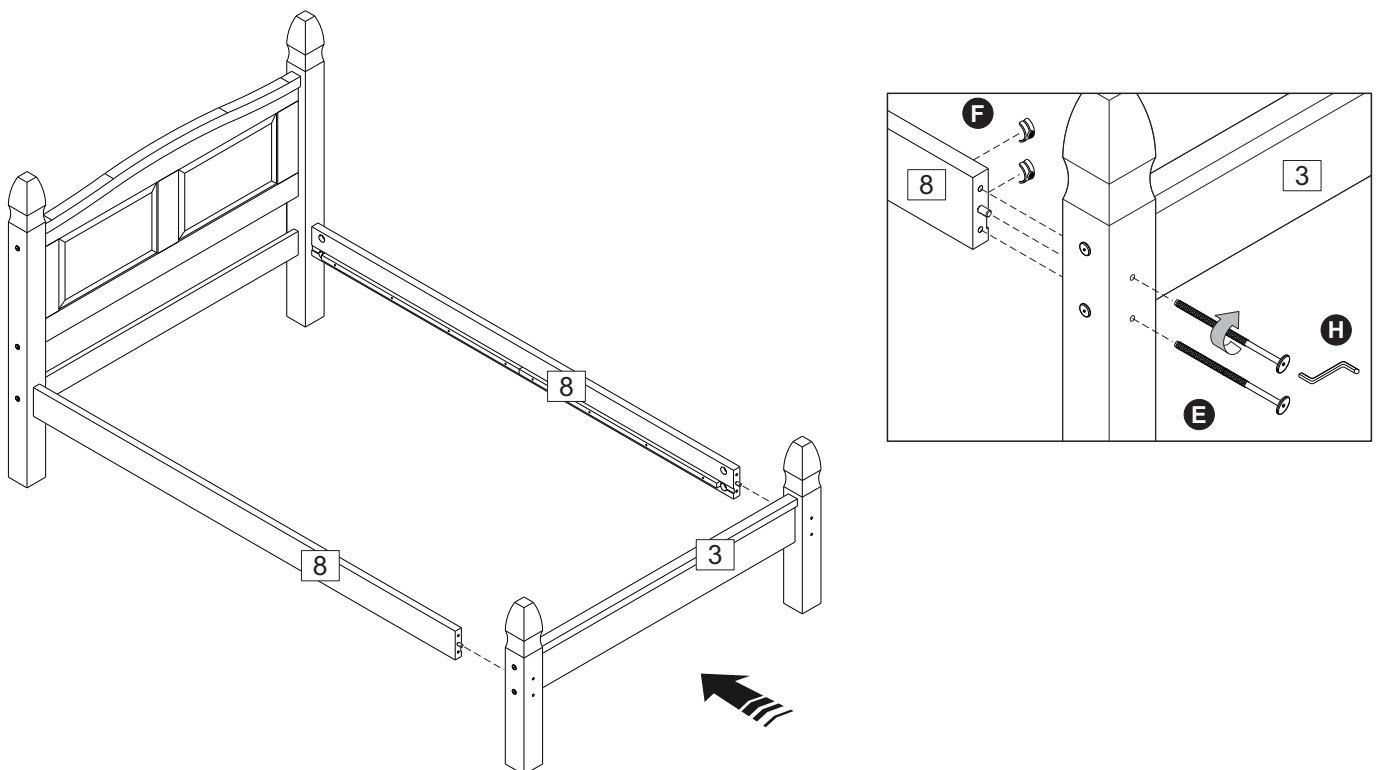


Step 7: Fix slats (9) to the side rails (8) using hardware parts J and C with a screwdriver (not provided). Vendor: S000238
Make sure to start from the ends and work towards the middle.


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

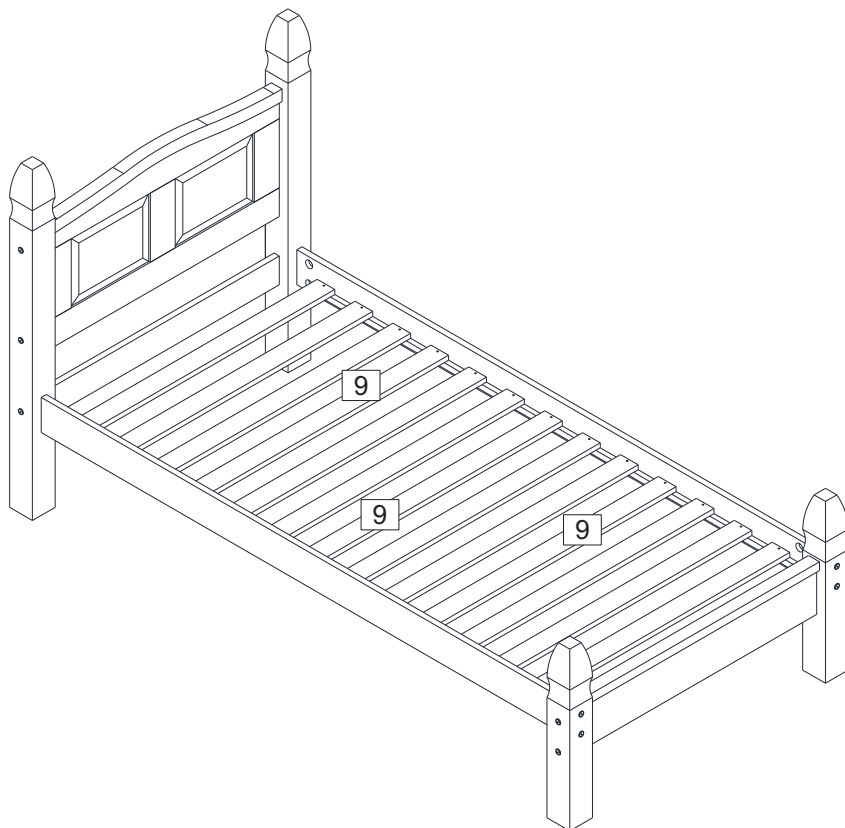

a:


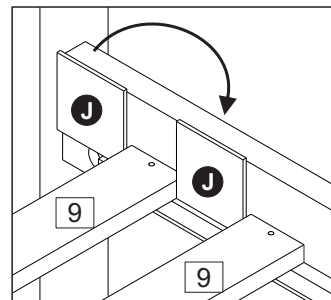


b:

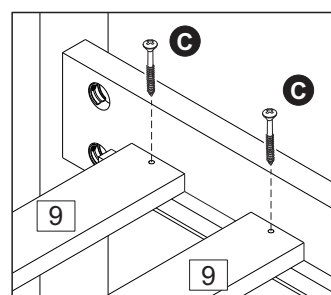

Step 8: Insert hardware part G using a small mallet (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

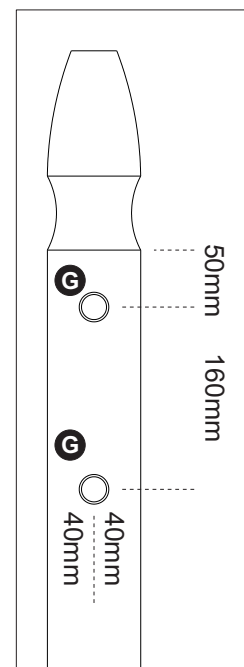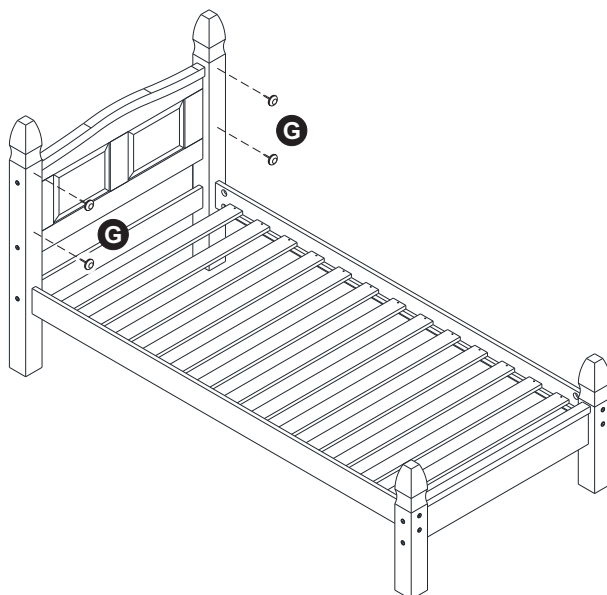

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.



Birlea

Suppliers of inspiration