

Assembly Instructions

Thank you for purchasing a Birlea product.

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag #ShareYourStyle and #Birlea. One winner will be selected at random each month.

To view our full terms and conditions please visit our website. www.birlea.com

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated.

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



ASSEMBLY INSTRUCTIONS 135CM URBAN BED

IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR 135CM URBAN BED.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:

Assembly should be carried out with this item laying flat, not standing upright.

Assemble on a soft, clean surface to prevent damages.

To erase the numbers printed on the pieces, use the rubber inside the accessories pack.

HEALTH & SAFETY:

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Always use on a level, even surface.


CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure.


DO NOT push this product as this will cause damage.

Always lift this product with two people to repositions.

Keep any sharp objects away from this product.

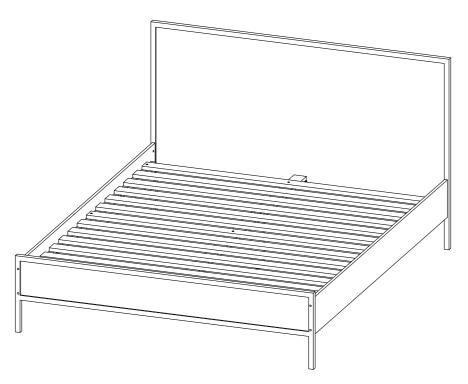



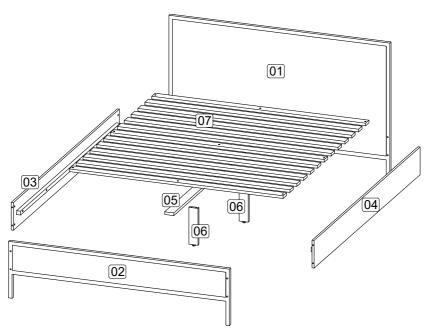


Parts List				Hardware List (BOX 2)			
Part	Descripion	Вох	Qty	Part	Description		Qty
01	Headboard panel	1	1	Α	JCBC Screw M6 x 60mm	(i) management	8
02	Tailstock panel	1	1	В	JRN Nut		8
03	Bed side panel (Left)	2	1	С	Allen key M4		1
04	Bed side panel (Right)	2	1	D	M3.5 x 16mm C.B Screw	4	16
05	Center slat	2	1	Е	M4 x 38mm C.B Screw	()	9
06	Slat support	2	2	F	M6 x 50mm CSK Cap Wood screw	<i>∞ammmmm</i> >	4
07	Bed slat	2	1 Set	G	Bracket L	9 9	2
** You will need a screwdriver for				Н	Bracket U		2

Step 1: Prepare these parts for assembly using hardware parts D, G and H.

assembly.


Step 1: Prepare these parts for assembly using hardware parts D, G and H. **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

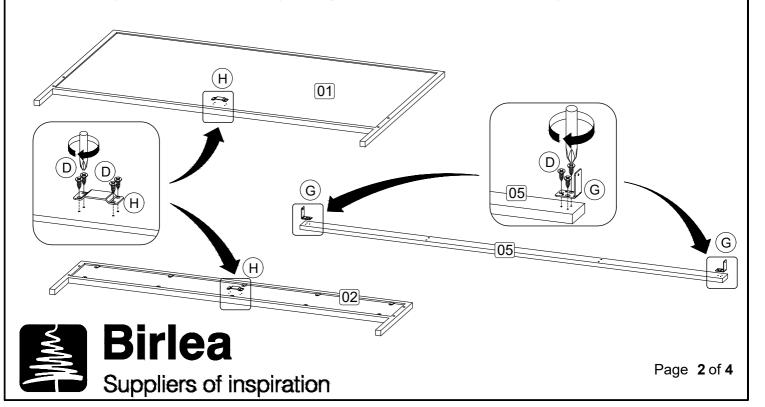

Step 2: Fix the panel (3) and (4) to panel (1) and (2) using hardware part A, B and C.

Please note that do not fully tighten the hardware A before assembling the panel (5).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

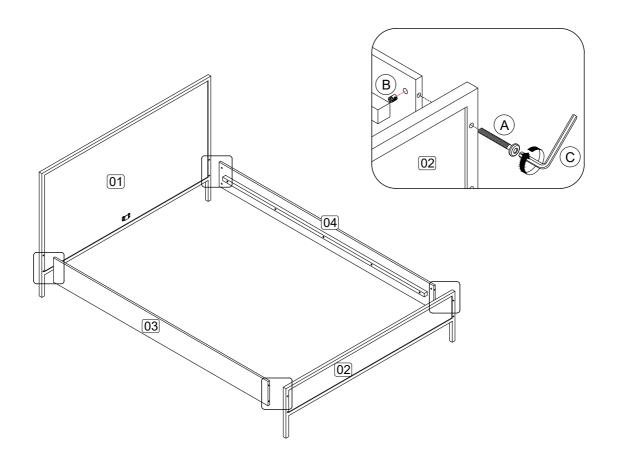

Step 2: Attach the panel (5) to panel (6) using hardware C and F.

Please note that the panel (6) has a plastic adjuster at the bottom to unscrew and adjust the height of panel (5) if necessary.


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

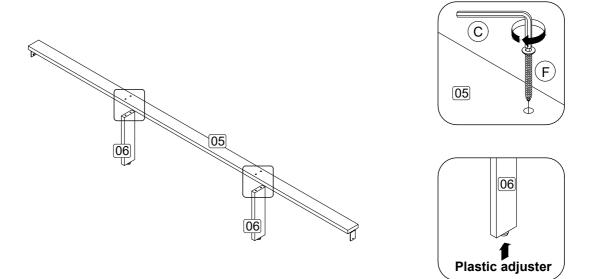




Step 3: Attach the hardware G at panel (5) to hardware H at panel (1) and (2) using hardware D with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

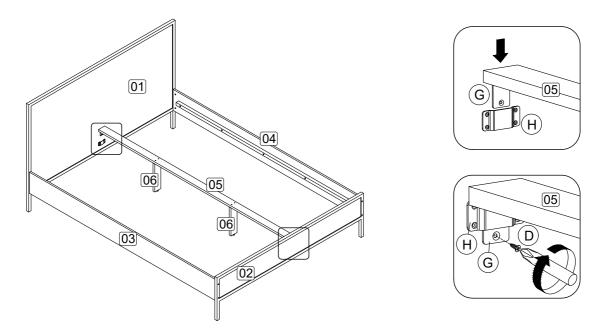

Step 4: Attach the panel (7) to panel (3), (4) and (5) using hardware E with a screwdriver (not provided). **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

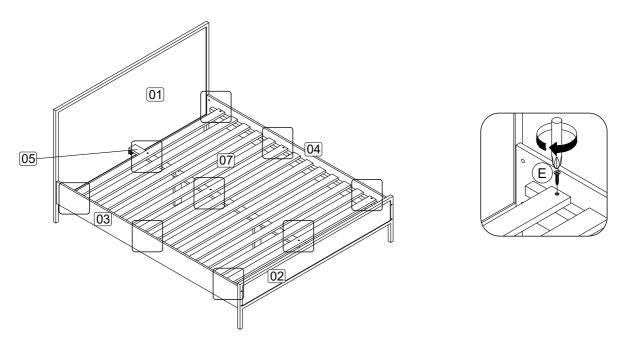

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to <u>info@birlea.com</u> to be shared in our #birleahome feature on instagram.

