


# SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the SHOE CABINET. Please read the instructions carefully to ensure safe operation of the product.

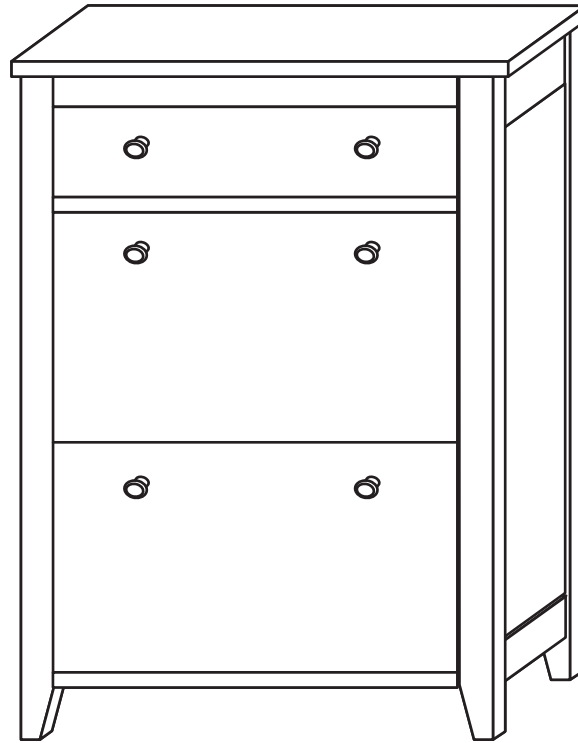

78 x 24 x 108CM/WHITE

---



**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION:** There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

---

## Tools Required

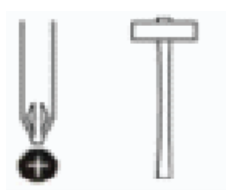

Batch No.: WMI 14999

Page 1 of 8

# **SHOE CABINET ASSEMBLY INSTRUCTIONS**

## **IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### **INFORMATION**

- This product is intended for a maximum weight of 30 kg. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included.

### **WARNINGS**

- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not sit or stand on the product.
- It is essential that this unit is fixed to a wall with the fixings provided
- We recommend the use of the wall fixing provided for safety reasons. N.B. If in doubt please consult a qualified tradesperson. Warning: Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

### **CARE INFORMATION**

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

# SHOE CABINET ASSEMBLY INSTRUCTIONS

## Parts and Fittings Checklist

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.


## PARTS

|                                                                                                                |                                                                                                                        |                                                                                                                |                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| LEFT HAND SIDE PANEL(1PC)<br> | RIGHT HAND SIDE PANEL(1PC)<br>        | TOP CROSS BAR(BACK)(1PC)<br> | MIDDLE CROSS BAR(BACK)(1PC)<br>      |
| BOTTOM PANEL(1PC)<br>         | TOP PANEL(1PC)<br>                    | BACK PANEL(1PC)<br>          | DRAWER LEFT HAND SIDE PANEL(1PC)<br> |
| DRAWER BACK(1PC)<br>          | DRAWER RIGHT HAND SIDE PANEL(1PC)<br> | DRAWER BOTTOM(1PC)<br>       | DRAWER FRONT(1PC)<br>                |
| DOOR(2PCS)<br>                | CROSS BAR(2PCS)<br>                   | SHELF(4PCS)<br>              |                                                                                                                         |

## FITTINGS

| Code | Item              |                                                                                       | Quantity |
|------|-------------------|---------------------------------------------------------------------------------------|----------|
| A    | CAM BOLT(Ø7X36mm) |  | 16       |
| B    | CAM LOCK          |  | 16       |
| C    | FOOT              |  | 4        |
| D    | SCREW(Ø3X12mm)    |  | 22       |
| E    | RUNNER            |  | 2        |
| F    | DOWEL(Ø8X30mm)    |  | 6        |
| G    | SCREW(Ø4X14mm)    |  | 12       |
| H    | SCREW(Ø3.5X30mm)  |  | 16       |
| I    | HANDLE            |  | 6        |
| J    | SCREW(Ø3.5X35mm)  |  | 4        |
| K    | DOOR AXIS         |  | 4        |
| L    | PLASTIC BRACKET   |  | 4        |
| M    | WALL FIXING       |  | 2        |
| N    | DOOR STOPPER      |  | 4        |
| O    | DRAWER STOPPER    |  | 2        |

## General Hints and Tips

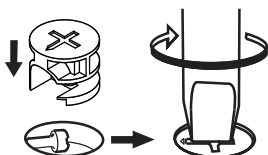


Ensure the arrow on the Cam is pointing towards the hole for the Cam Bolt. Once the Cam Bolt is inserted into the Cam, turn the Cam clockwise with a Screwdriver 90 - 180 degrees until secure.

Batch No.: WMI 14999

# SHOE CABINET ASSEMBLY INSTRUCTIONS


## STEP 1

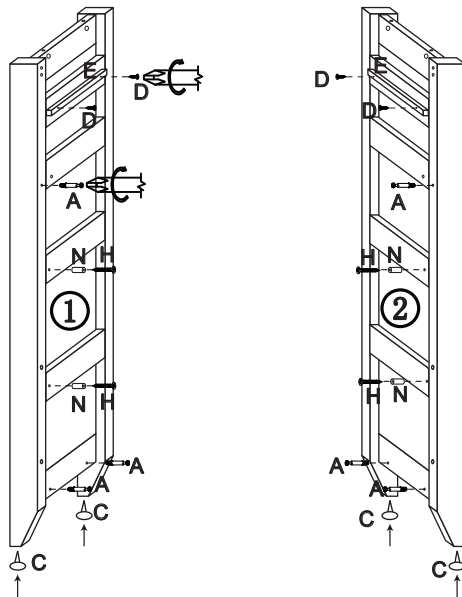

### PARTS REQUIRED

- 1. LEFT HAND SIDE PANEL X 1
- 2. RIGHT HAND SIDE PANEL X 1
- A. CAM BOLT X 6
- C. FOOT X 4
- D. SCREW X 4
- E. RUNNER X 2
- H. SCREW X 4
- N. DOOR STOPPER X 4

## STEP 2

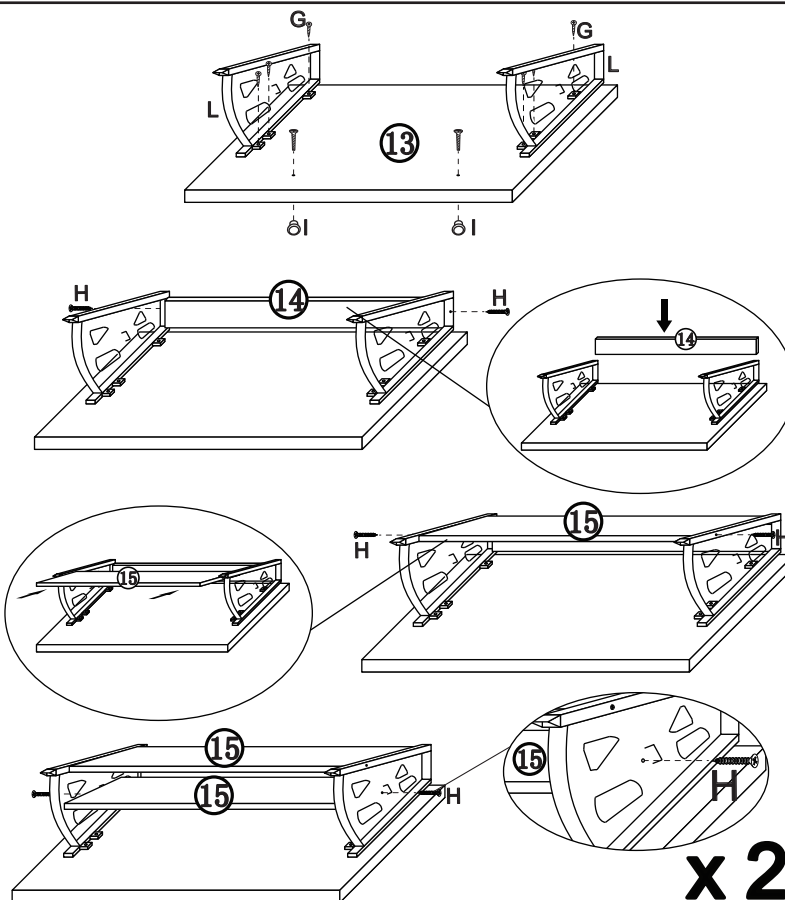


### PARTS REQUIRED

- 13. DOOR X 2
- 14. CROSS BAR X 2
- 15. SHELF X 4
- G. SCREW X 12
- H. SCREW X 12
- I. HANDLE X 4
- L. PLASTIC BRACKET X 4

# SHOE CABINET ASSEMBLY INSTRUCTIONS

## STEP 3

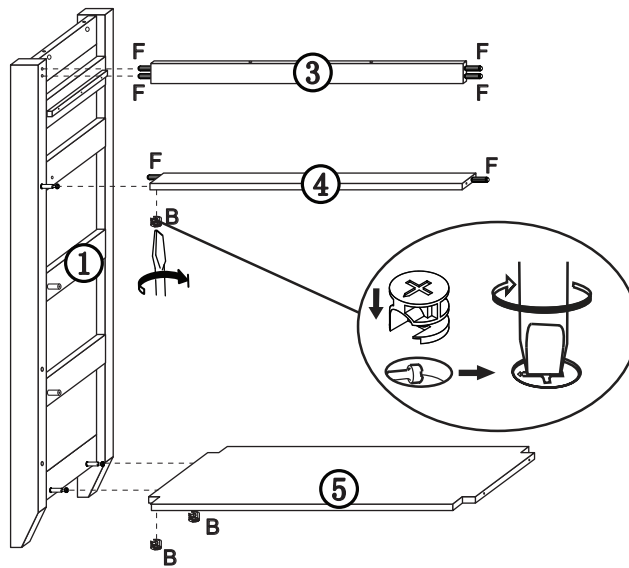


### PARTS REQUIRED

- 1. LEFT HAND SIDE PANEL X 1
- 3. TOP CROSS BAR(BACK) X 1
- 4. MIDDLE CROSS BAR (BACK) X 1
- 5. BOTTOM PANEL X 1
- B. CAM LOCK X 3
- F. DOWEL X 6

Ensure the cam lock is lined up with the cam bolt when fitting.

## STEP 4

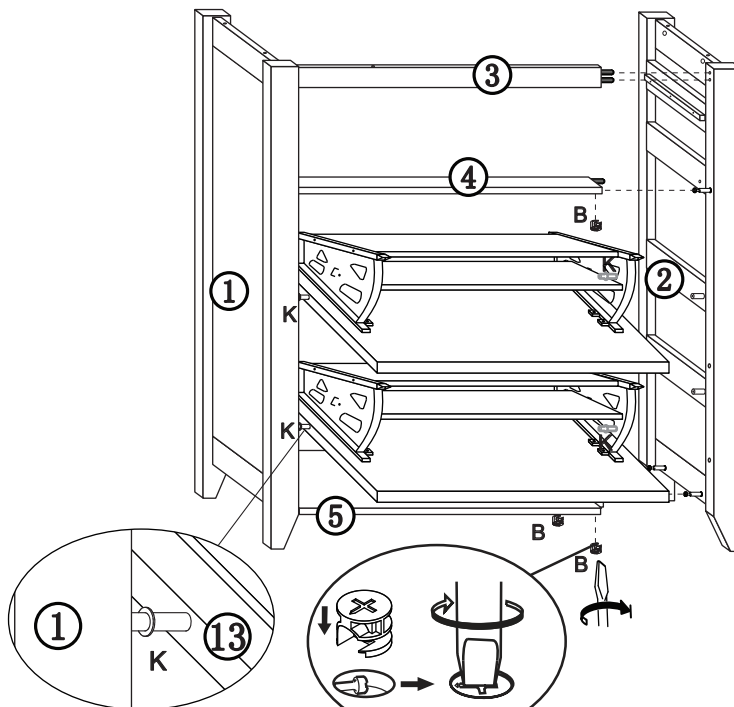


### PARTS REQUIRED

- 2. RIGHT HAND SIDE PANEL X 1
- B. CAM LOCK X 3
- K. DOOR AXIS X 4

Ensure the cam lock is lined up with the cam bolt when fitting.

# SHOE CABINET ASSEMBLY INSTRUCTIONS

## STEP 5

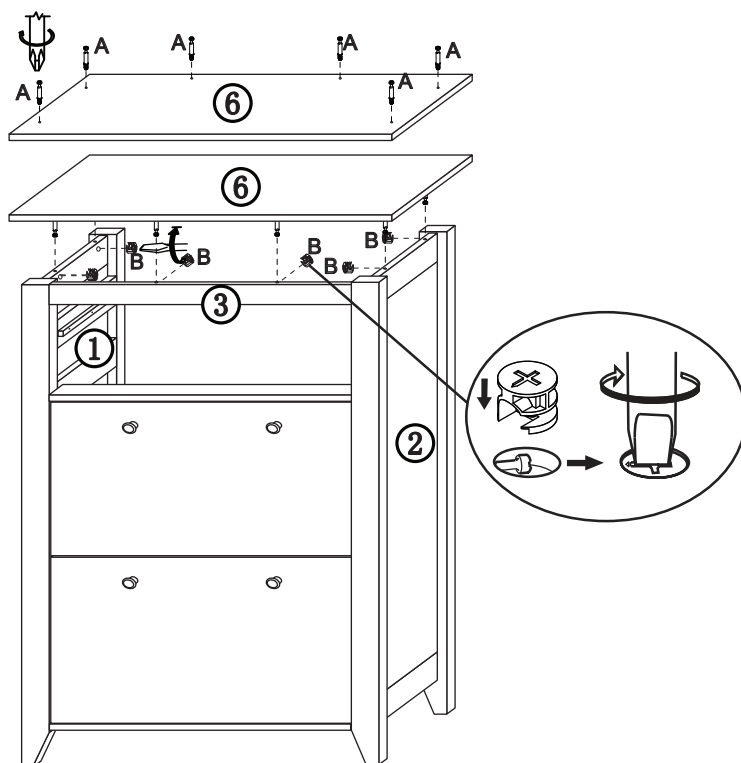

Ensure the cam lock is lined up with the cam bolt when fitting.


### PARTS REQUIRED

6. TOP PANEL X 1

A. CAM BOLT X 6

B. CAM LOCK X 6

## STEP 6

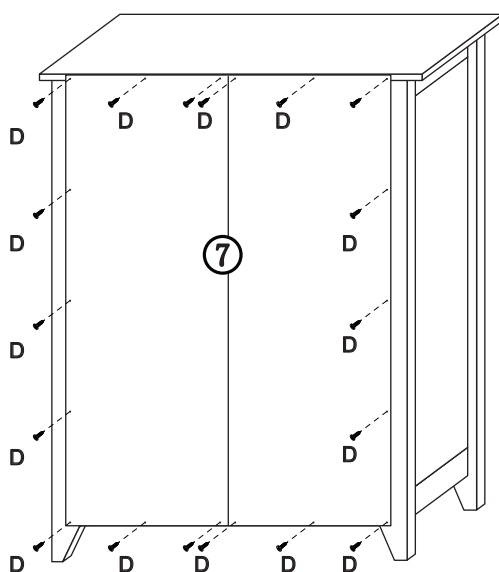

### PARTS REQUIRED

7. BACK PANEL X 1

D. SCREW X 18

# SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 7

PARTS REQUIRED

8. DRAWER LEFT HAND  
SIDE PANEL X 1

9. DRAWER BACK X 1

10. DRAWER RIGHT HAND  
SIDE PANEL X 1

11. DRAWER BOTTOM X 1

12. DRAWER FRONTX 1

A. CAM BOLT X 4

B. CAM LOCK X 4

J. SCREW X 4

I. HANDLE X 2




STEP 8

PARTS REQUIRED

O. DRAWER STOPPER X 2

# SHOE CABINET ASSEMBLY INSTRUCTIONS

## STEP 9

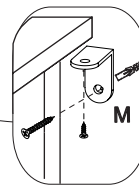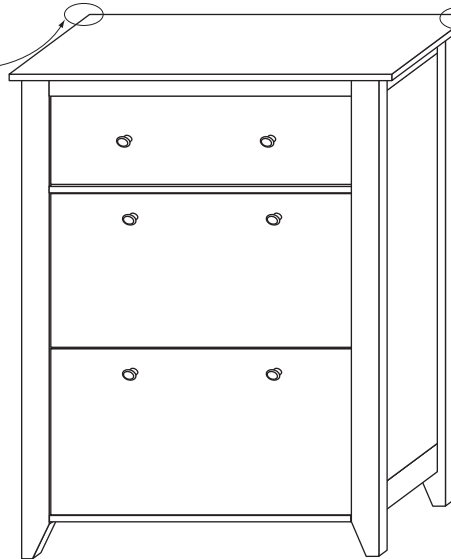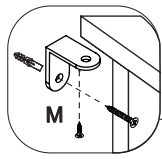

## PARTS REQUIRED

M. WALL FIXING X 2

## COMPLETE

