







# CHICAGO 90 / SLIM


PL - Instrukcja montażu D - Montageanleitung GB - Assembly instructions

















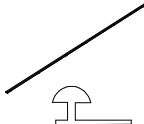





RO - instructiuni de montaj SK - Navod na montaz TR - Montaj tali matu

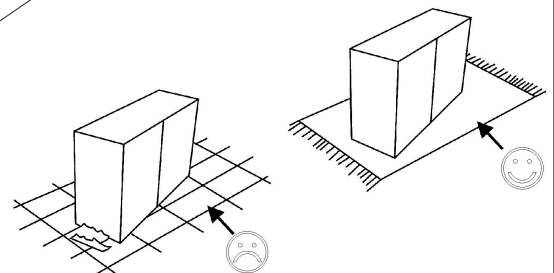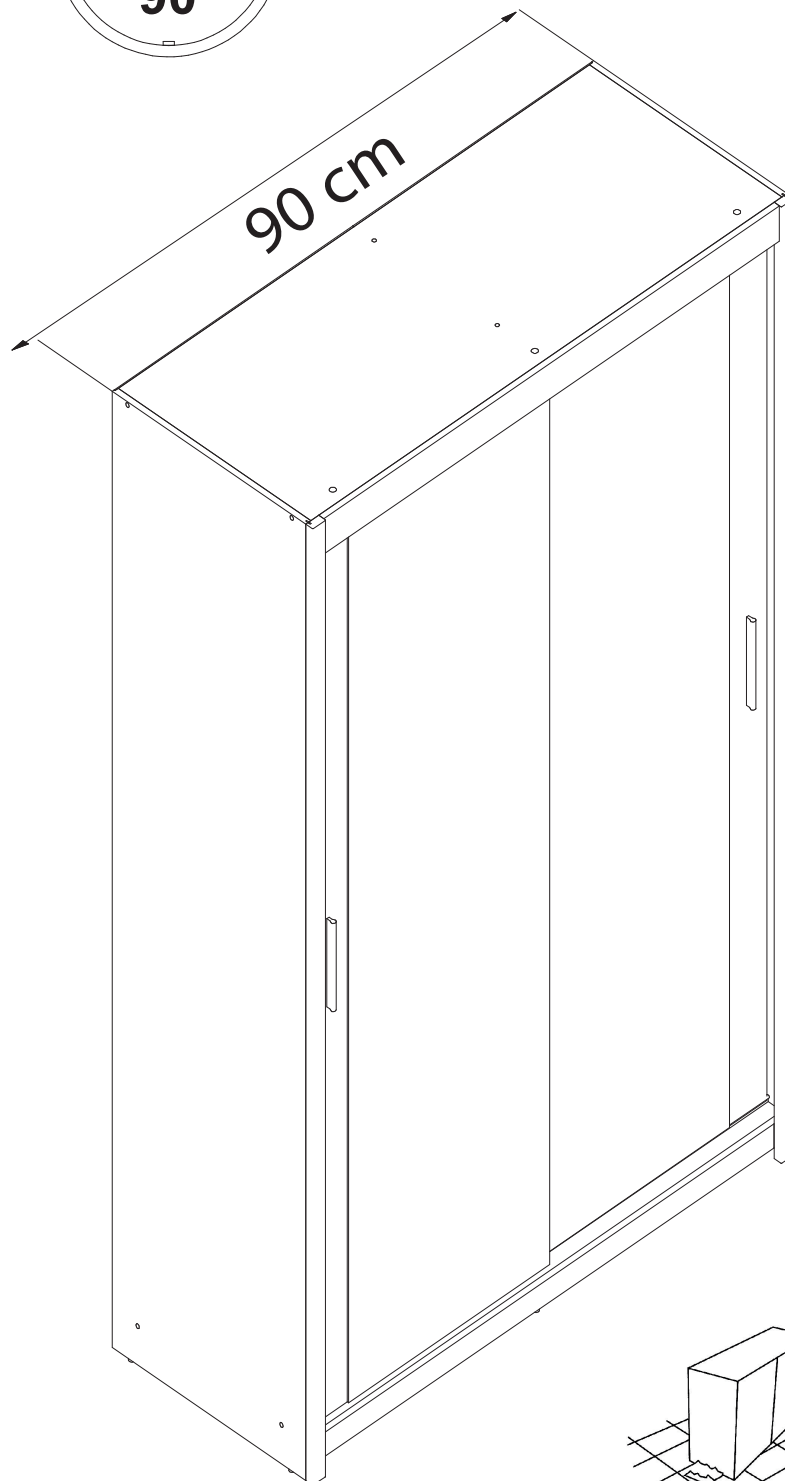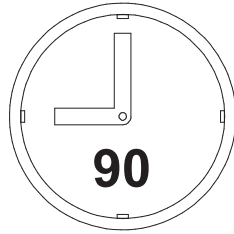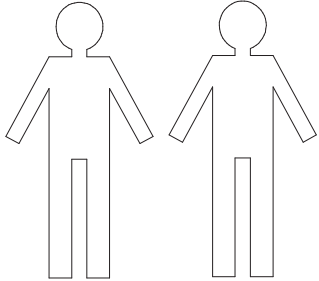NL - Handleiding voor de montage IT - Istruzioni di montaggio FR - Notice de montage

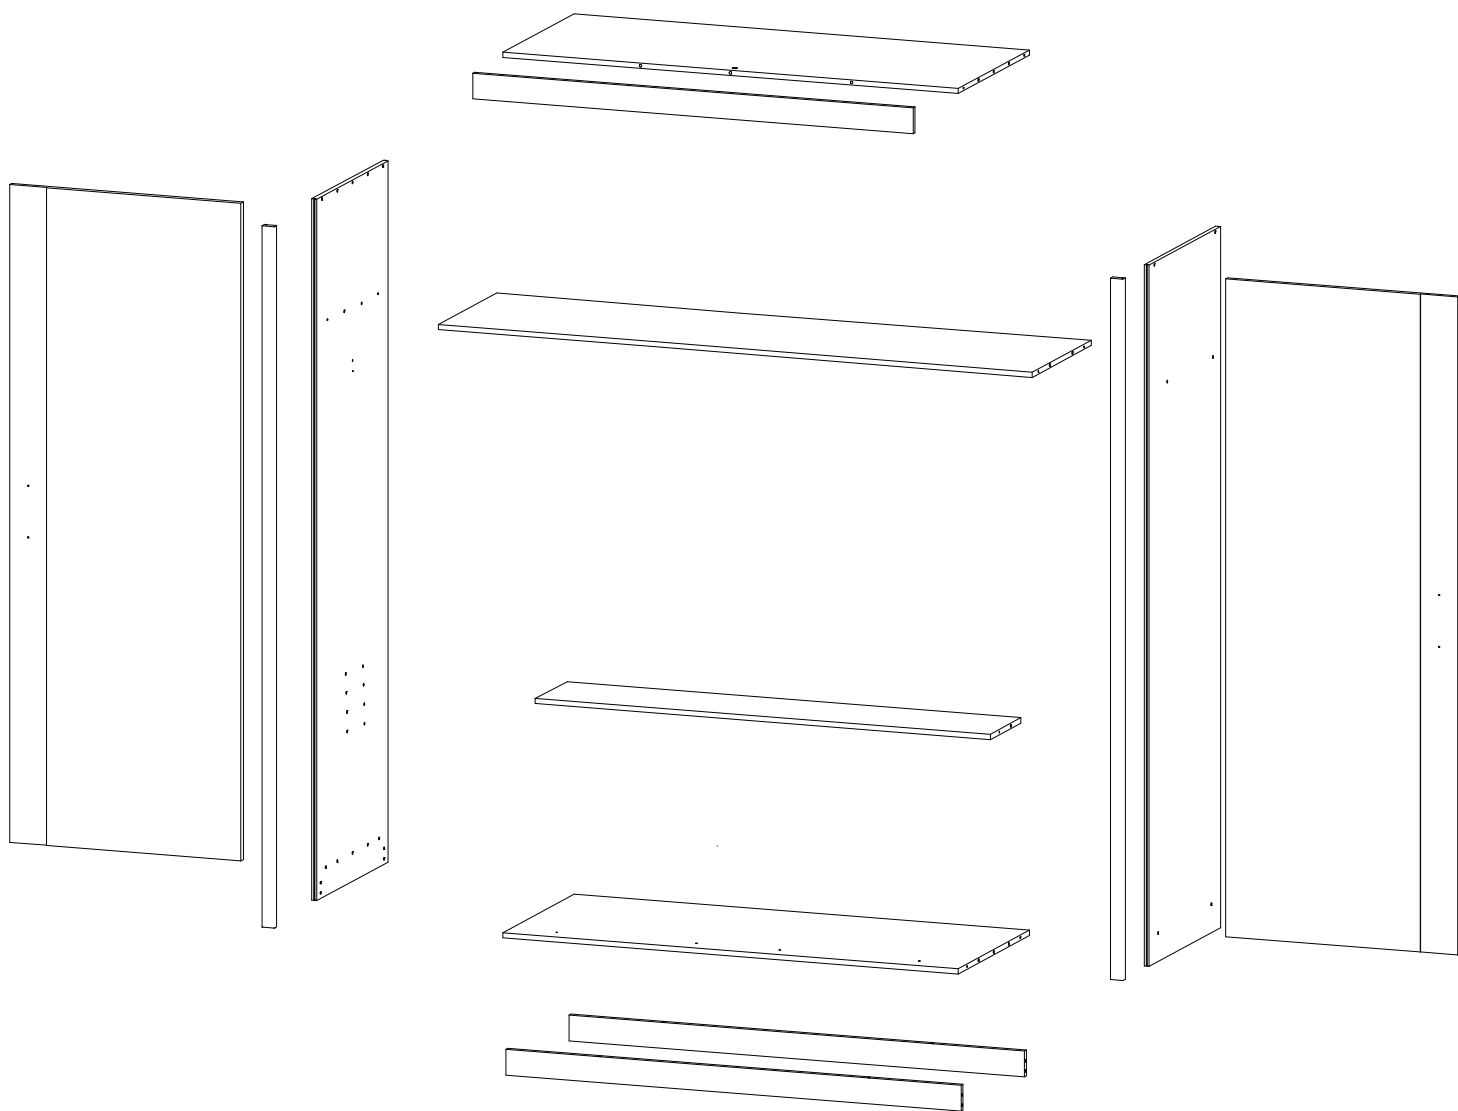
CZ - Montážní návod HU - Szerelési utmutató RU - инструкция по сборке






<b>A</b> 32 x Ø8x35 	<b>B</b> 1 x Ø15x12 	<b>B1</b> 1 x 34mm 	<b>B2</b> 1 x Ø17 	<b>B3</b> 12 x Ø7x50 	<b>B4</b> 16 x Ø12 
<b>C2</b> 4 x Ø3x25 	<b>A1</b> 10x 	<b>C4</b> 50 x Ø4x16 	<b>C5</b> 60 x 	<b>E</b> 2 x 160mm 	<b>F</b> 1x 720mm 
<b>F1</b> 2 x 	<b>G</b> 4 x 	<b>G1</b> 4 x 	<b>H</b> 4 x 	<b>I</b> 4 x 	<b>J</b> 6 x 
	<b>K</b> 1 x 	<b>C3</b> 16 x Ø3x16 	<b>Z</b> 1 x 	<b>H2</b> 16 x 	


1

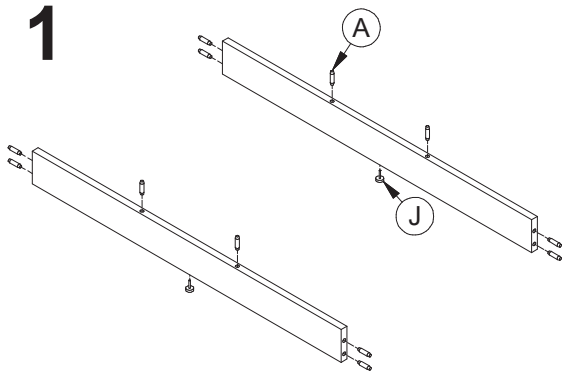


2

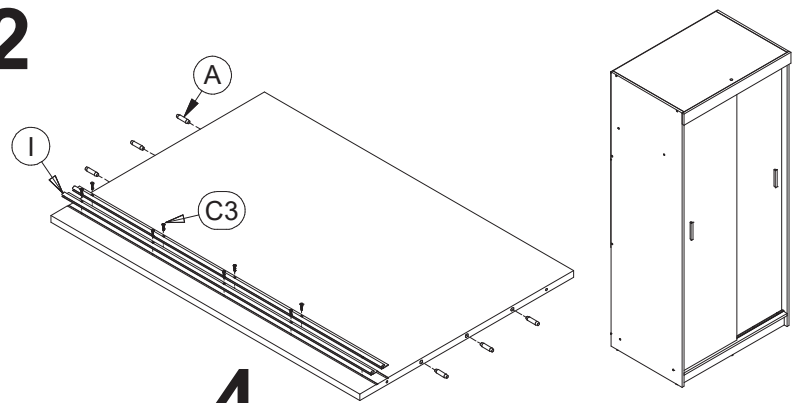


3

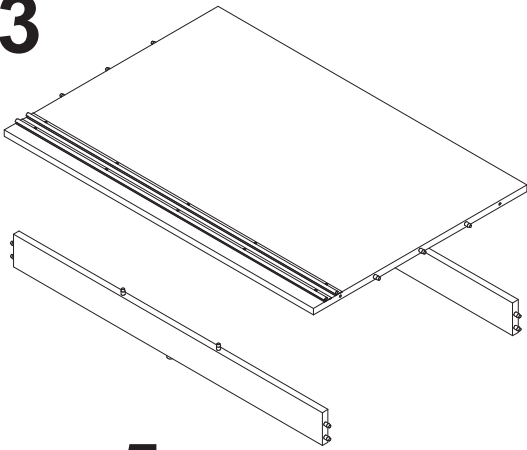


4

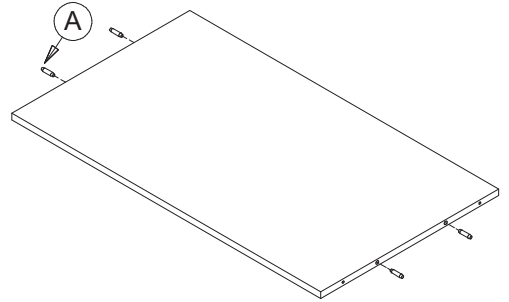


5

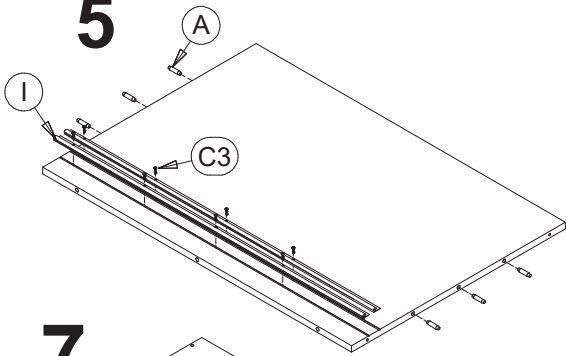


6

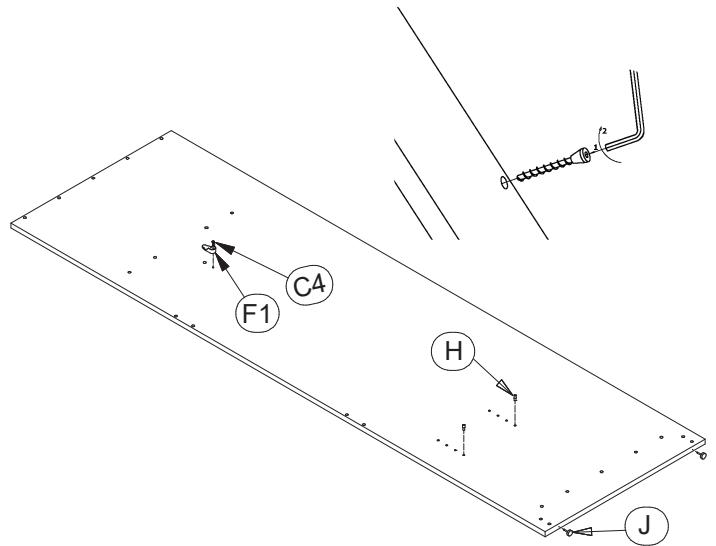


7

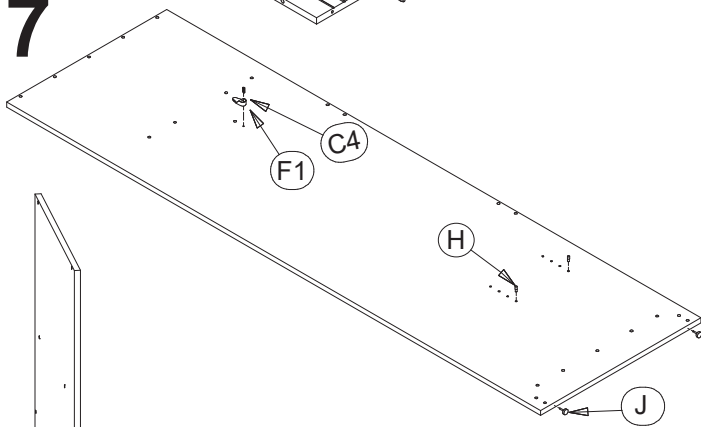

9

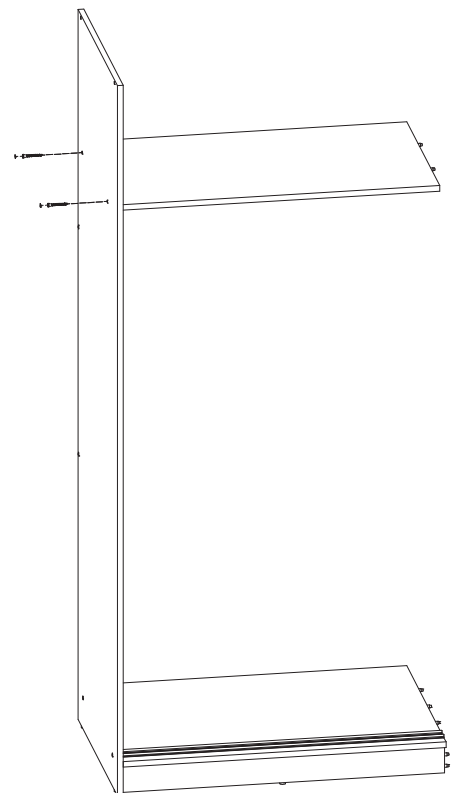


8

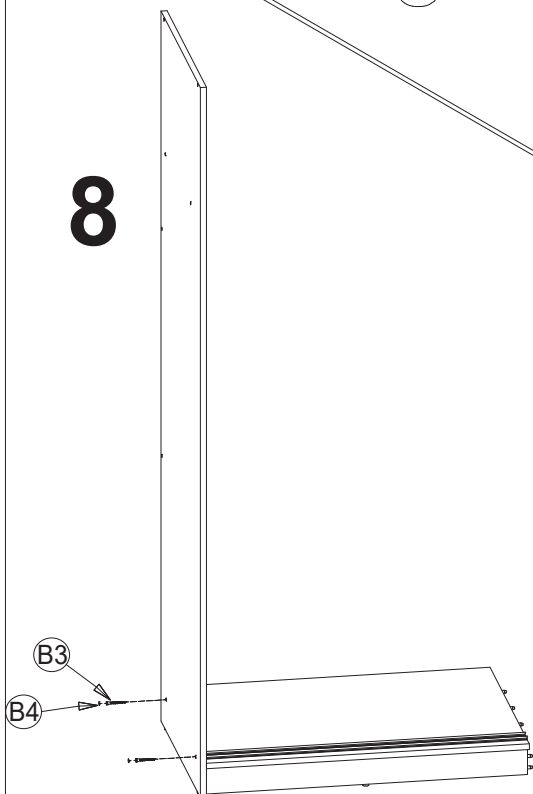


3 str.



# 10

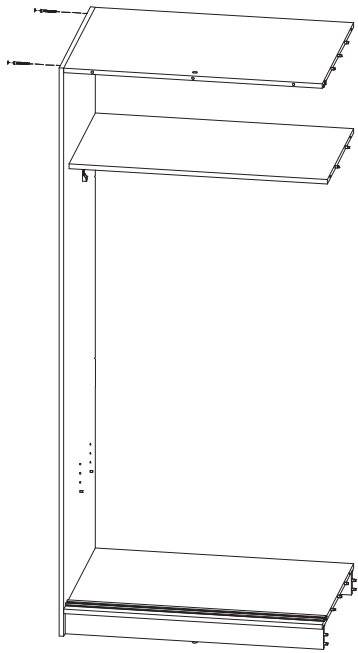



# 11

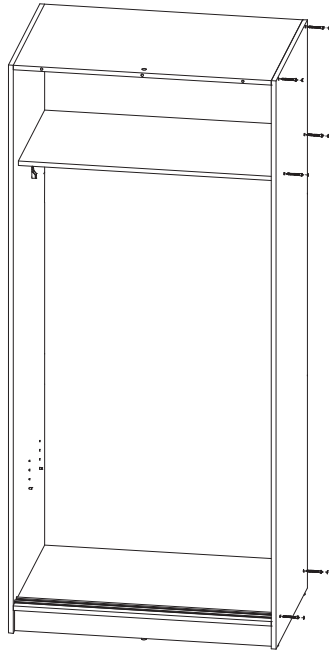


# 12

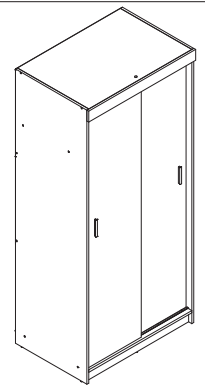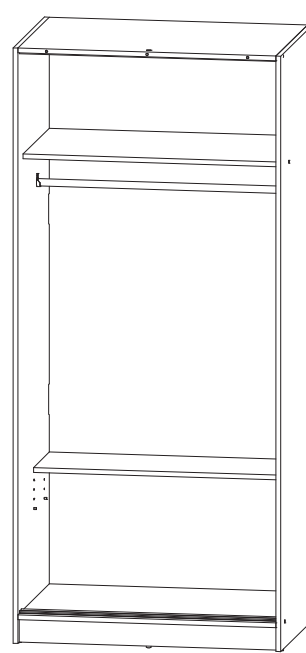



# 13

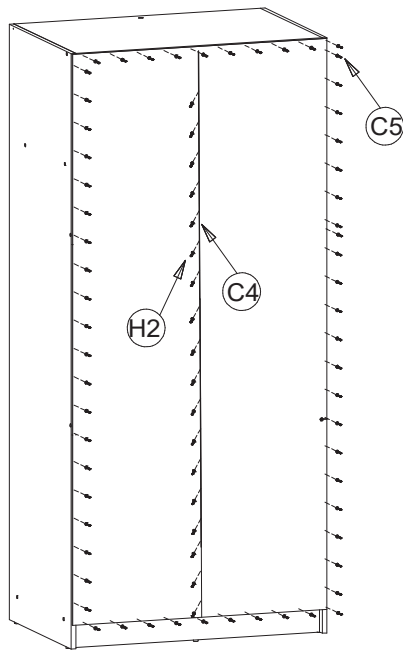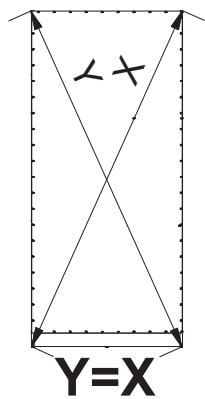



# 14

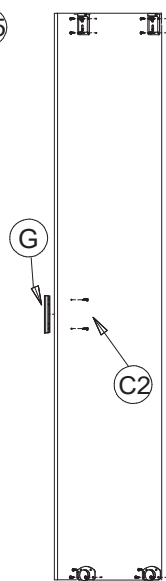


# 15

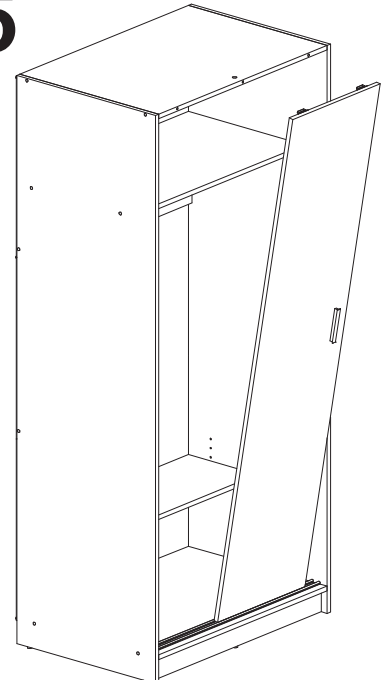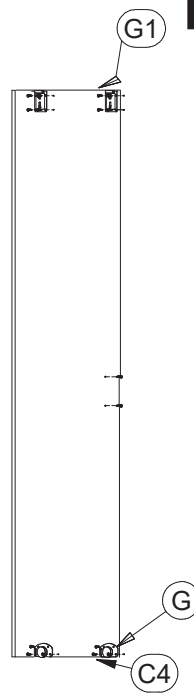

# 16

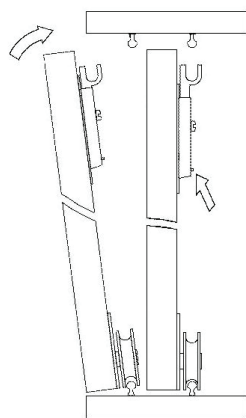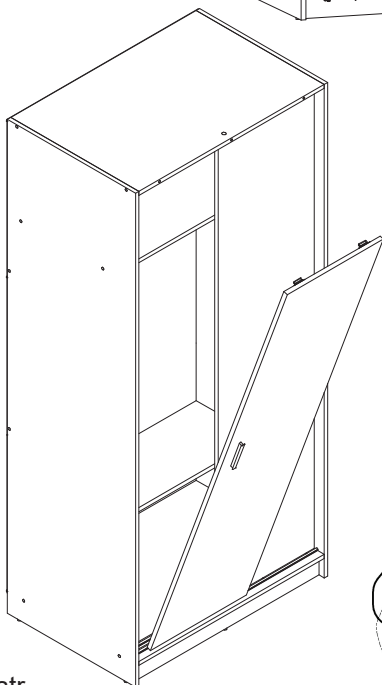

# 17

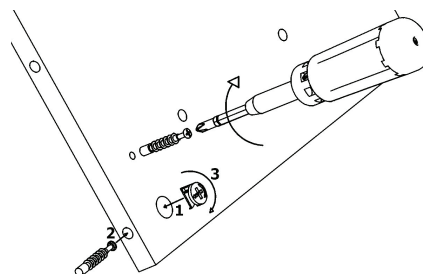

# 18

